

PROMAX



USER'S MANUAL RG3000-E

PROMAX
AN SPX BRAND

TIF
AN SPX BRAND

ROBINAIR
AN SPX BRAND

PROMAX AUTO
AN SPX BRAND

ATP
AN SPX BRAND

Advanced Test Products Europe · SPX Service Solutions Germany GmbH · Lürriper Straße 62 · 41065 Mönchengladbach · Germany
Telefon +49 (0) 21 61 - 5 99 06-0 · Telefax +49 (0) 21 61 - 5 99 06-16 · www.atp-europe.de · info@atp-europe.de

TABLE OF CONTENTS

| | |
|--------------------------------------------|--------------|
| I) Safety precautions | |
| A) The safe way is the only way! | 1 |
| B) Refrigerant gas recovery & containment | 2 |
| II) Important general information | 3 |
| III) Operating procedures | |
| A) Operating your RG3000-E | 4-6 |
| B) Set-up procedures | 7-9 |
| C) Purging the non-condensable gases | 10 |
| IV) Diagrams | |
| A) Parts list | 11 |
| B) Refrigerant flow diagram | 12 |
| C) Wiring diagram | 13 |
| V) Automatic safety pressure switch | 14 |
| VI) Care and maintenance | 15 |
| VII) Technical data | 16 |
| VIII) Helpful hints | 17-19 |
| IX) Troubleshooting | 20 |

Design specifications and material are subject to change without notice. REV2 82011AS

This manual may not be reproduced in any way, shape or form without express written consent of Advanced Test Products Europe.

THE SAFE WAY IS THE ONLY WAY!

***NOTE! If you are not a qualified refrigerant service technician,
do not use this equipment***

1. The technician should always wear goggles and gloves when working on refrigeration systems.
2. Be sure that any room where you are working is thoroughly ventilated, especially if a leak is suspected. Refrigerant vapor is hazardous to your health and can cause death.
3. Always think before acting. Familiarity breeds carelessness and carelessness can be harmful to your health or, worse, result in death.
4. Read the Material Safety Data Sheets (MSDS) on all compounds with which you are likely to come in contact. Read MSDS on refrigerant and refrigerant oil. Obtain MSDS sheets from your refrigerant supplier.
5. Never use oxygen when testing for leaks. Any oil in contact with oxygen under pressure will form an explosive mixture.
6. Refrigerant systems are generally electrically driven and controlled. Be sure to disconnect the unit from the power source before servicing it.
7. Always store refrigerant containers in a cool, dry place.
8. Always open service and cylinder valves slowly. This allows quick control of the flow of gasses if there is any danger. Once it is determined that there is no danger, the valves may be opened fully.
9. Do not mix refrigerant in a system, a tank or anywhere else. Each type of refrigerant must have its own tank, filters, etc.
10. If moisture enters the refrigerant system, it is likely to cause considerable damage. Keep everything connected with the refrigeration system thoroughly dry and clean.
11. To reduce the risk of fire, avoid the use of extension cords as they may overheat. If you must use an extension cord it should be a minimum of 12 AWG and not longer than 5m.
This equipment should be used in locations with mechanical ventilation providing at least four air changes per hour, or the equipment should be located at least 45cm (18") above the floor. Do not use this equipment in the vicinity of spilled or open containers of gasoline or any other flammable liquid.

REFRIGERANT GAS RECOVERY & CONTAINMENT

Safety comes first. Read all safety information for the safe handling of refrigerant including the Material Safety Data Sheet provided by your refrigerant supplier. Never operate unit in an explosive environment. Wear safety glasses and protective gloves. Work area must be well ventilated. This unit should only be operated by a qualified technician.

***** CAUTION: REFRIGERANT STORAGE CONTAINERS *****








Use only approved cylinders with a minimum of **41 bar** working pressure that meet the current regulations.

NOTE: Recovery cylinders are designed for different pressures. **Do not** exceed the working pressure of each cylinder.

Safety codes recommend that closed tanks not be filled over 80% of volume with liquid. The remaining 20% is called head pressure room.

NEVER TRANSPORT AN OVERFILLED CYLINDER

Refrigerant expands when it gets warm and may cause a tank to explode if overfilled.

| CYLINDER TEMP. | 16 °C | 21 °C | 38 °C | 54 °C | 66 °C |
|-------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| STARTING WITH CYLINDER 80% FULL BY VOLUME |  |  |  |  |  |
| SPACE OCCUPIED BY LIQUID | 80 % | 81 % | 83 % | 90 % | 94 % |
| STARTING WITH CYLINDER 90% FULL BY VOLUME |  |  |  |  |  |
| SPACE OCCUPIED BY LIQUID | 90 % | 92 % | 96 % | 100 % | |

IMPORTANT GENERAL INFORMATION

Before operating the RG3000-E recovery unit, read the following:

1. Storage cylinders sometimes have valves that are not properly seated when manufactured. Keeping caps on these valves will guard against refrigerant leakage.
2. Always operate the unit on a flat level surface.
3. Your RG3000-E has one internal pressure shut off switch. If the pressure inside the system should go above 38,5 bar (550 psi), the system will automatically shut itself off.

CAUTION

The 38,5 bar (550 psi) switch does not prevent tank overflow. If your system shuts off on high pressure and is connected to your tank, you may have overfilled your tank and created a very dangerous situation! Take immediate measures to relieve any high pressure and/or tank overflow.


4. **WARNING!** Never overflow storage tanks. Overflowing may cause tanks to explode.
5. A scale must be used to avoid overflowing the storage tank.
6. Tanks and filters should be used for one refrigerant only. Before using a tank previously used for another refrigerant, completely empty the tank, evacuate it, purge the tank using dry nitrogen, and re-evacuate it.
7. Special care should be taken when recovering from a burned-out system. Use two high acid capacity filters, in series. Alco type EK-162-F or Sporlan type C-162-F are recommended.
8. When you have finished recovering from the system, flush your RG3000-E with a small amount of refrigerant oil and a small amount of clean refrigerant to purge off any foreign substances left in the unit.
9. Always empty refrigerant from the unit into a storage tank; see Purge/Auto Evacuate procedure. Liquid refrigerant left in the condenser may expand, causing damage to components.

OPERATING YOUR RG3000-E


Connect your RG3000-E to a 230 V outlet and close both valves on the RG3000-E. Open the valves to the cylinder and system and make sure no air is in the hoses, only clean refrigerant. Open the outlet valve on the unit. Switch the main power switch to the ON position. The fan and compressor will start running. Slowly open the inlet valve on the unit and the refrigerant will start to move.

OPERATING PROCEDURES

NORMAL RECOVERY

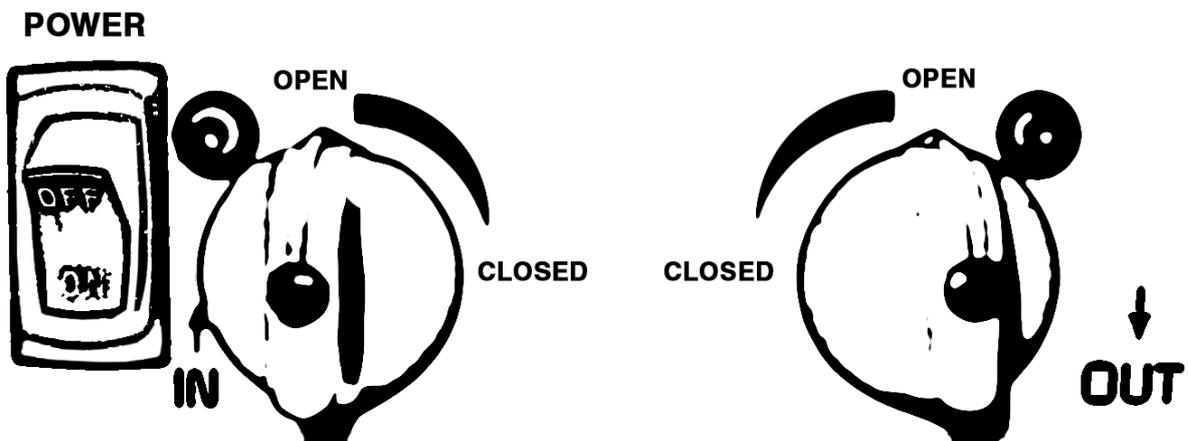

PURGE / AUTO EVACUATE

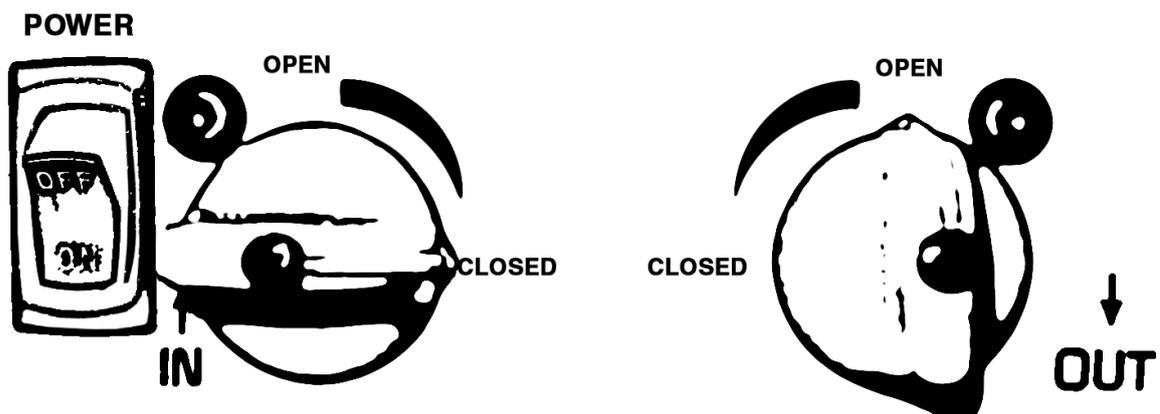

NOTE: To change from Recovery mode to Purge:
If available, close the valve from the system to the inlet hose and wait until the LP gauge shows 0,1 bar. Then close the Inlet valve of the RG3000-E. Turn the unit off after the unit goes in to vacuum and switch off the RG3000-E. Close the outlet valve of the RG3000-E and close the valve on the cylinder.

OPERATING YOUR RG3000-E

Procedure for Normal System Recovery

- 1 Inspect the RG3000-E thoroughly to insure that it is in good operating condition.
- 2 Make sure all connections are correct and tight (see diagram on page 8)
- 3 Open the liquid valve of the recovery cylinder (always open valves slowly to check hoses and connections for leaks).
- 4 Open the outlet valve of the RG3000-E.
- 5 Open the liquid valve on the manifold gauge set; opening the liquid valve will remove the liquid from the system first, greatly reducing the recovery time (after the liquid has been removed, open the manifold vapor valve to finish evacuating the system).
- 6 Connect your RG3000-E to a 230 V outlet.
- 7 Switch the main power switch to the ON position. You should hear the fan and compressor running.
- 8 Slowly open the inlet valve on the RG3000-E.
 - a) If the compressor starts to knock, slowly throttle back the inlet valve until the knocking stops.
 - b) If the inlet valve was throttled back, it should be fully opened once the liquid has been removed from the system (the manifold vapor valve should also be opened at this time).
- 9 Run the unit until minimum required vacuum is achieved.
 - a) Close the manifold vapor and liquid valves.
 - b) Close the RG3000-E inlet valve.
 - c) Shut unit off and proceed with the Purge procedure on the next page.
- 10 Always purge the RG3000-E after each use. Failure to purge the remaining refrigerant from the RG3000-E could result in the acidic degradation of internal components, ultimately causing premature failure of the unit.

CAUTION

When pumping liquid, do not allow the RG3000-E to operate with the inlet valve too far open, causing the compressor to knock. Doing so may damage the compressor.

OPERATING YOUR RG3000-E

Procedure for Purging Remaining Refrigerant From the RG3000-E

1. Close the valves of the system being serviced that are connected to the inlet valve of the RG3000-E.
2. Close the inlet valve on the RG3000-E. The outlet valve should remain open.
3. Run the unit until desired vacuum is achieved.
4. Turn the RG3000-E off.
5. Close the valves on the recovery tank and the outlet valve on the RG3000-E.
6. Disconnect and store all hoses.
7. Replace the in-line filter on your RG3000-E after each time excessive contaminant is encountered.

Important Note

We strongly recommend the use of Robinair hoses with Quick Seals™ to avoid wasting refrigerant because of their unique reverseable, built-in, check valve.

RA69060A - set of 3 hoses wit Quick Seals™ Red, Yellow and Blue; 152cm long.

RG3000-E REFRIGERANT RECOVERY ADDITIONAL INFORMATION

To achieve the deepest final vacuum, use the tank cooling method to lower the head pressure on the recovery tank. Repeat as necessary to achieve the desired vacuum level.


NOTE: If there is no liquid in the recovery tank, then the cooling method will not work. In this case, use an empty tank that has been fully evacuated to achieve the final vacuum level required.

To maximize recovery rates use the shortest possible length of 3/8" or larger hose. A hose no longer than 90cm is recommended. Always remove all unnecessary hose core depressors and Schraeder valves from valve connections (using the proper valve core removal tool) for maximum flow. Deformed rubber seals and core depressors in hoses and faulty or unnecessary Schraeder valves can restrict flow by up to 90%.

If the tank pressure exceeds 31,5 bar, use the tank cooling procedure to reduce the tank pressure. When recovering large amounts of liquid, use the "PUSH/PULL" method of recovery (see diagram below).

CAUTION: When using the "PUSH/PULL" method, you must use a scale to prevent overfilling the storage tank. Once the "PUSH/PULL" siphon is started, it can continue and overfill the storage tank even if the tank is equipped with a float level sensor. The siphon can continue even when the machine is turned off. You must manually close the valves on the tank and the unit to prevent overfilling the recovery tank.

SET-UP DIAGRAM FOR TANK PRE OR SUB COOLING PROCEDURE

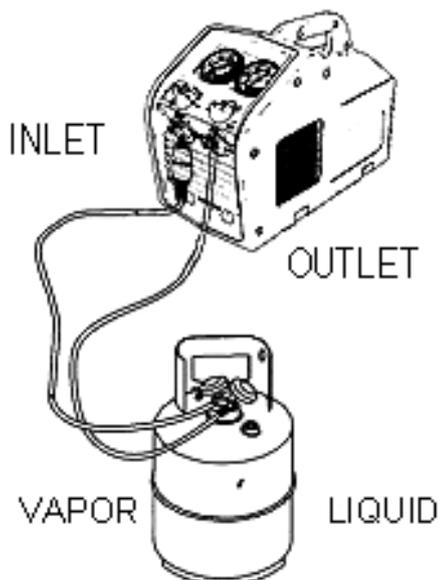


To start you must have a minimum of 2,5 kg of liquid refrigerant in the tank.

Throttle the outlet valve so that the outlet pressure is 7 bar (100 psi) greater than the inlet pressure, but never more than 31,5 bar (450 psi).

Run the unit until the tank is cold.


SET-UP DIAGRAM FOR REFRIGERANT RECOVERY

This method is the fastest method for recovering vapor refrigerant.

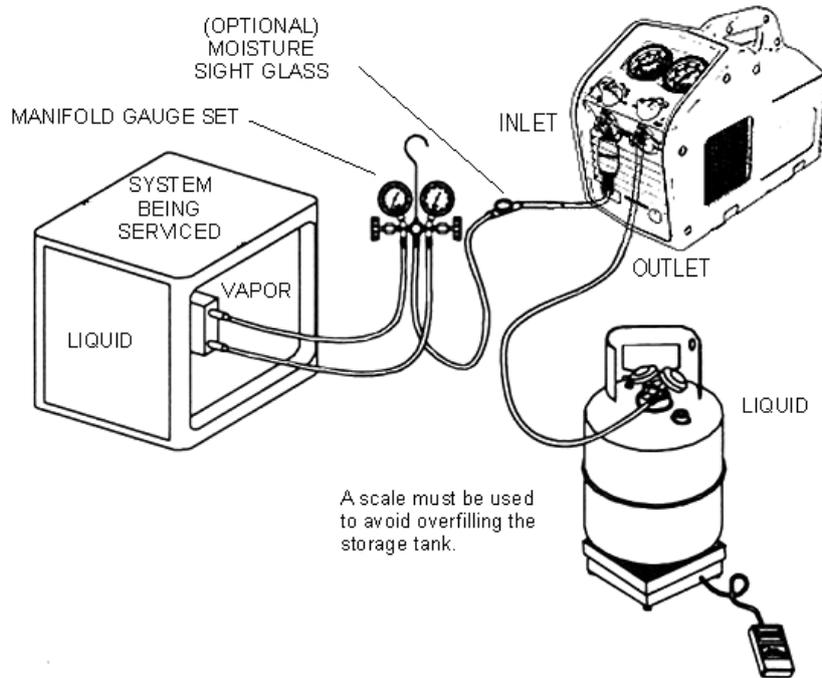


SET-UP DIAGRAM FOR "PUSH/PULL" METHOD

Push pull only works with large systems where the liquid is readily accessible. Do not use this method on systems that contain less than 15 pounds as it may not work.

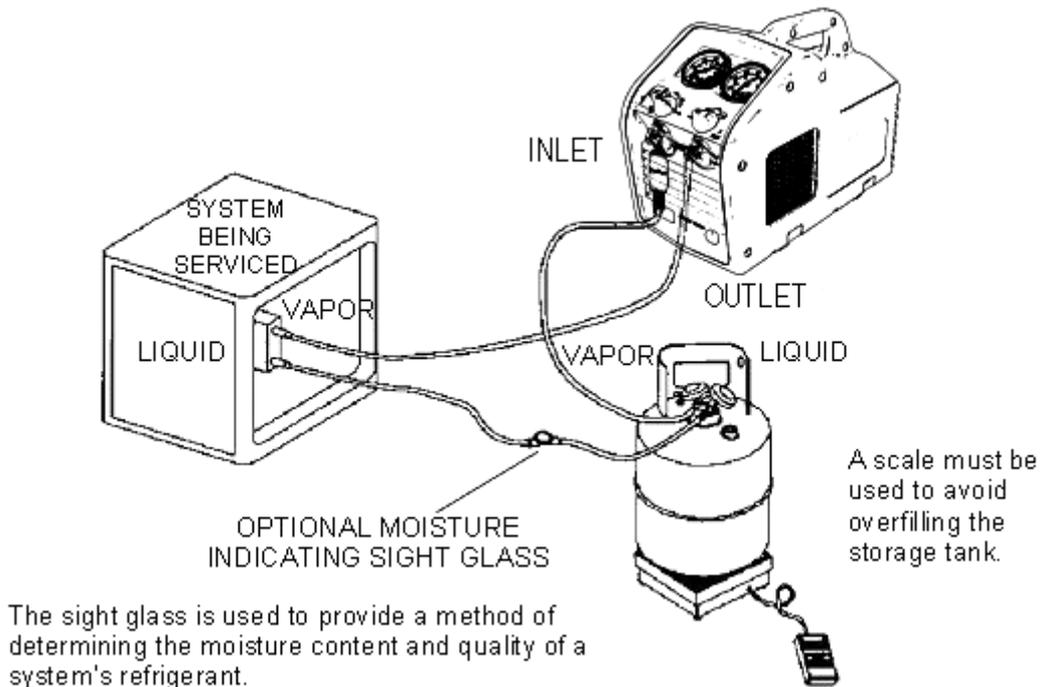

OPTIONAL RECOVERY / TANK PRE OR SUB COOLING FOR FIXED HOSE SET UP

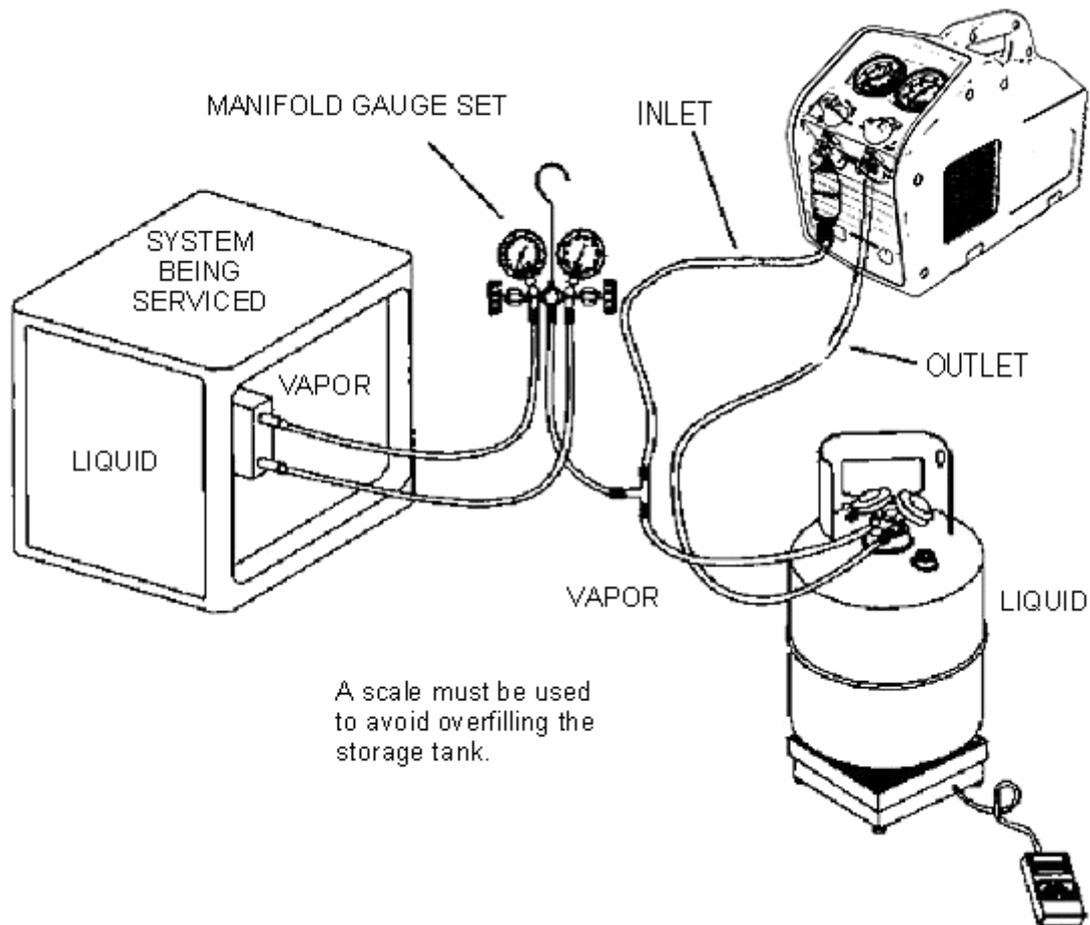

Normal recovery:

Tank Vapor valve is closed.

Tank pre or sub cooling:


Tank Vapor valve is open and both Manifold Gauge Set valves are closed. Follow above procedure.

RG3000-E RECOVERY

Purging the non-condensable gasses from identified refrigerant in a tank


- 1) Allow the tank to sit undisturbed for 24 hours. (This allows the air to rise to the top).
- 2) Connect a manifold to the tank and read the amount of pressure in the tank by looking at the outlet pressure gauge.
- 3) Determine the ambient temperature in the room.
- 4) Refer to a Refrigerant pressure/temperature chart. Find the temperature on the chart and look across to the corresponding pressure for the type of refrigerant in the tank. Determine how that relates to the reading on the gauge.
- 5) If the pressure reading is higher than the pressure shown on the chart, very slowly (so as not to cause turbulence inside the tank) crack open the vapor valve. Watch the pressure on the gauge decrease. To prevent venting, add 0,3 - 0,35 bar (4 - 5 psi) to the pressure shown on the chart. When the gauge corresponds to that pressure, close the vapor valve valve.
- 6) Allow the tank to sit for 10 minutes and check the pressure again.
- 7) Repeat the process again if necessary.

PARTS LIST RG3000-E

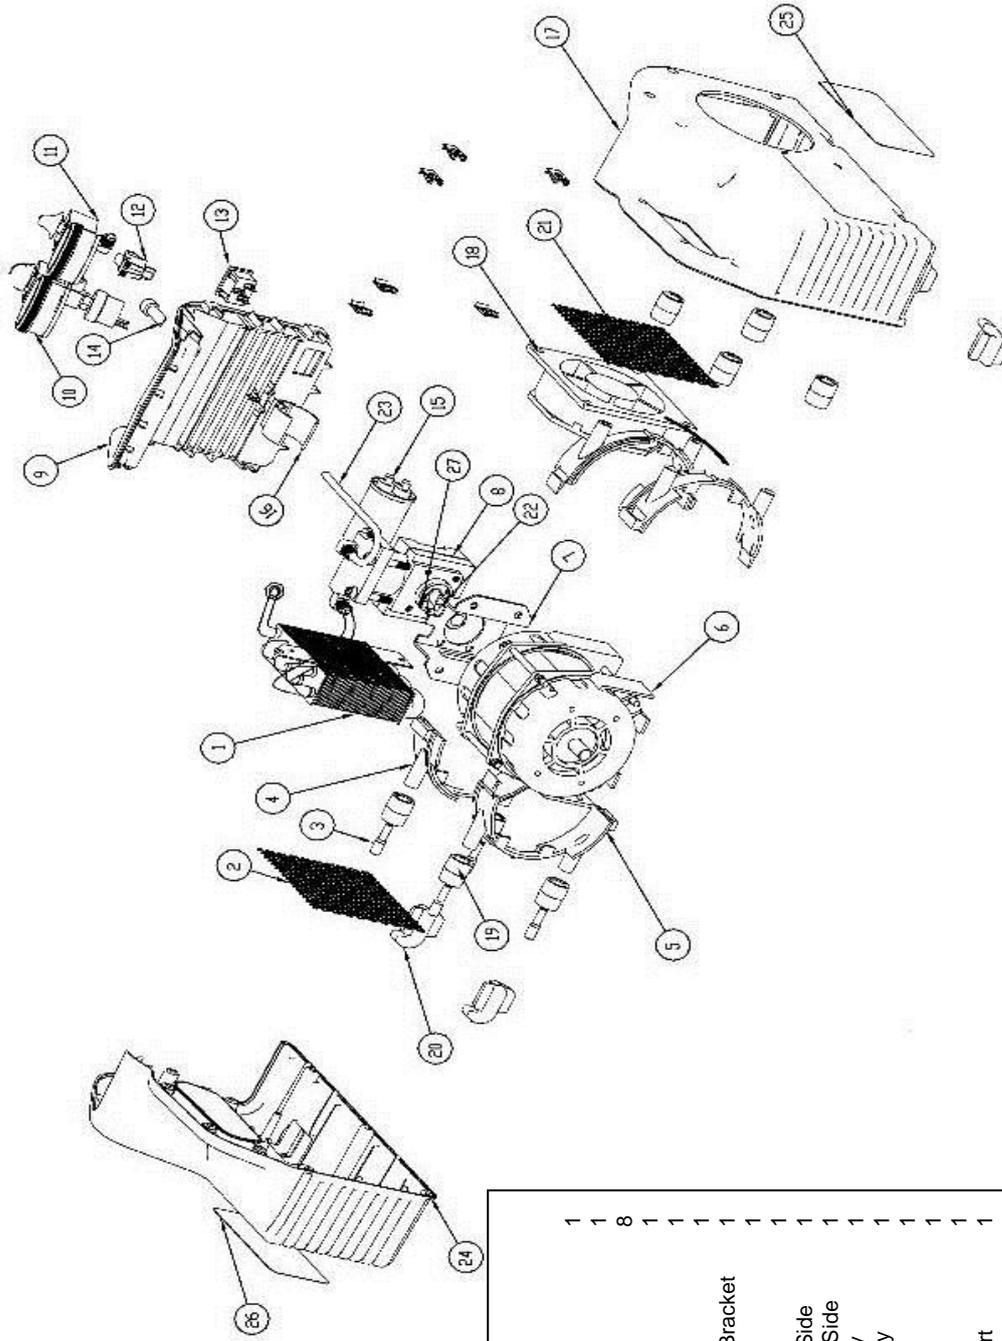

| Pos. Qty. | Art.-Nr. | Description | 1 |
|-----------|-----------------|----------------------------|---|
| 1 | 105-201234-001 | Condensor | 1 |
| 2 | 110-ATP100179 | Condensor grill | 1 |
| 3 | 111-SPX552732 | Post Grommet | 8 |
| 4 | 111-201229-001 | Motor Clamp, Left | 1 |
| 5 | 111-201230-001 | Motor Clamp, Right | 1 |
| 6 | 105-201231-001 | Motor | 1 |
| 7 | 110-201212-001 | Compressor-/Motor Bracket | 1 |
| 8 | 105-201221-001 | Compressor | 1 |
| 9 | 111-201200-001 | Front Panel | 1 |
| 10 | 105-201232-001 | Manifold Assy. Low Side | 1 |
| 11 | 105-201233-001 | Manifold Assy. High Side | 1 |
| | 110-201201-001 | Low Side Gauge only | 1 |
| | 110-201202-001 | High Side Gauge only | 1 |
| 12 | 145-ATPEL1310 | Power Switch | 1 |
| 13 | 140-ATPRR121917 | Power Receptacle | 1 |
| 14 | 111-ATP100419 | Fuse Holder | 1 |
| 15 | 125-201226-001 | Capacitor, Motor Start | 1 |
| 16 | 111-201241-001 | Capacitor Mounting bracket | 1 |
| 17 | 111-201228-001 | Case Half, Right | 1 |
| 18 | 145-201235-001 | Fan | 1 |
| 19 | 111-SPX550503 | Grommet | 8 |
| 20 | 111-SPX550502 | Rubber foot | 4 |
| 21 | 110-201243-001 | Fan grill | 1 |
| 22 | 110-201213-001 | Coupling | 1 |
| 23 | 110-201242-001 | Inlet Tube | 1 |
| 24 | 111-201227-001 | Case Half, Left | 1 |
| 25 | 180-201239-001 | Instruction Label | 1 |
| 26 | 180-201239-001 | Nameplate Label | 1 |

REFRIGERANT-FLOW-DIAGRAM

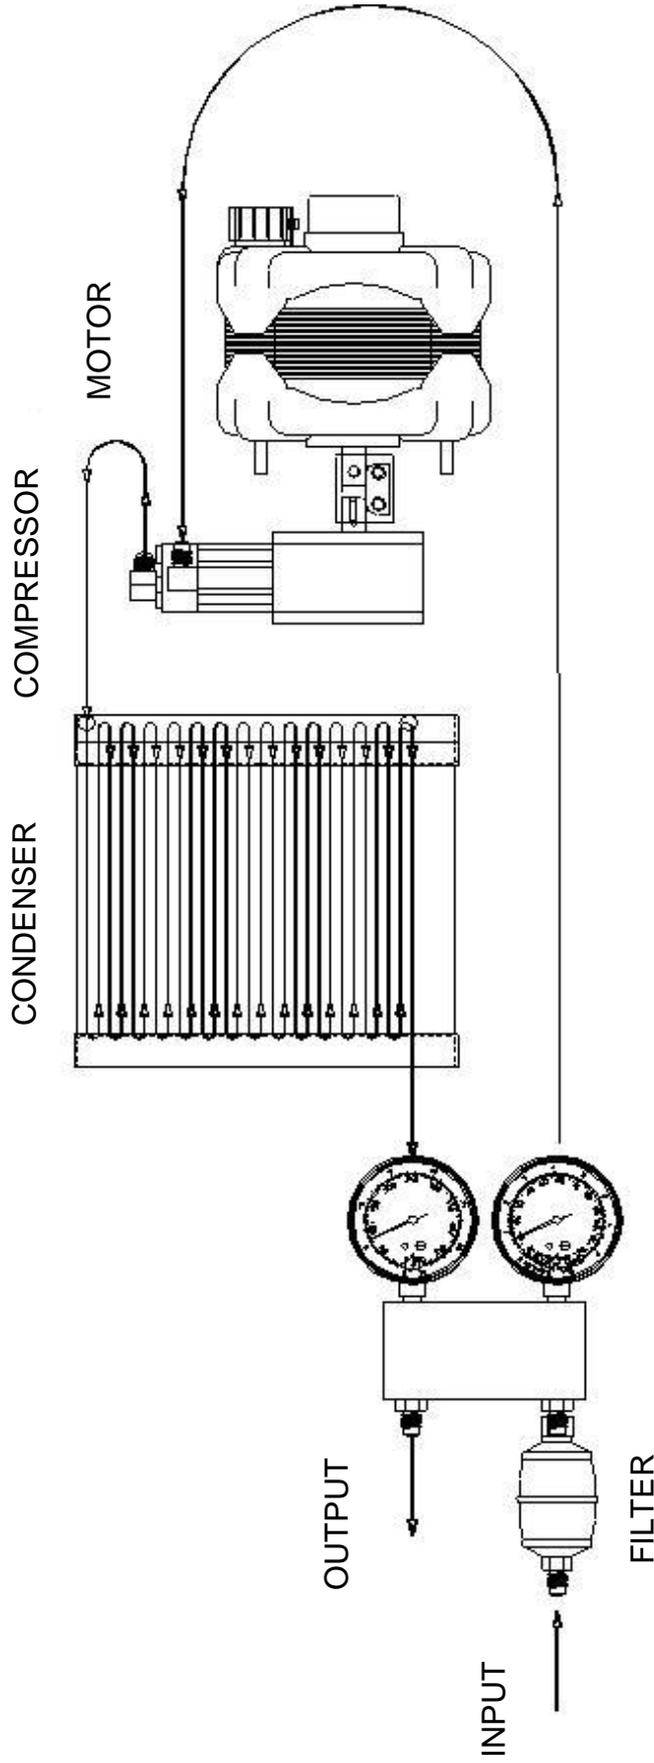


NOTE:

A filter must always be used. Failure to use a filter will invalidate your warranty. The use of a filter will greatly reduce the risk of damage to your RG3000-E by preventing foreign material from entering the unit.

Special consideration for filtration must be given when you know you are servicing a machine that has "Burned Out". We recommend the use of two size 162 filter driers, in line, to be used for that job and that job only.

RG3000-E WIRING DIAGRAM

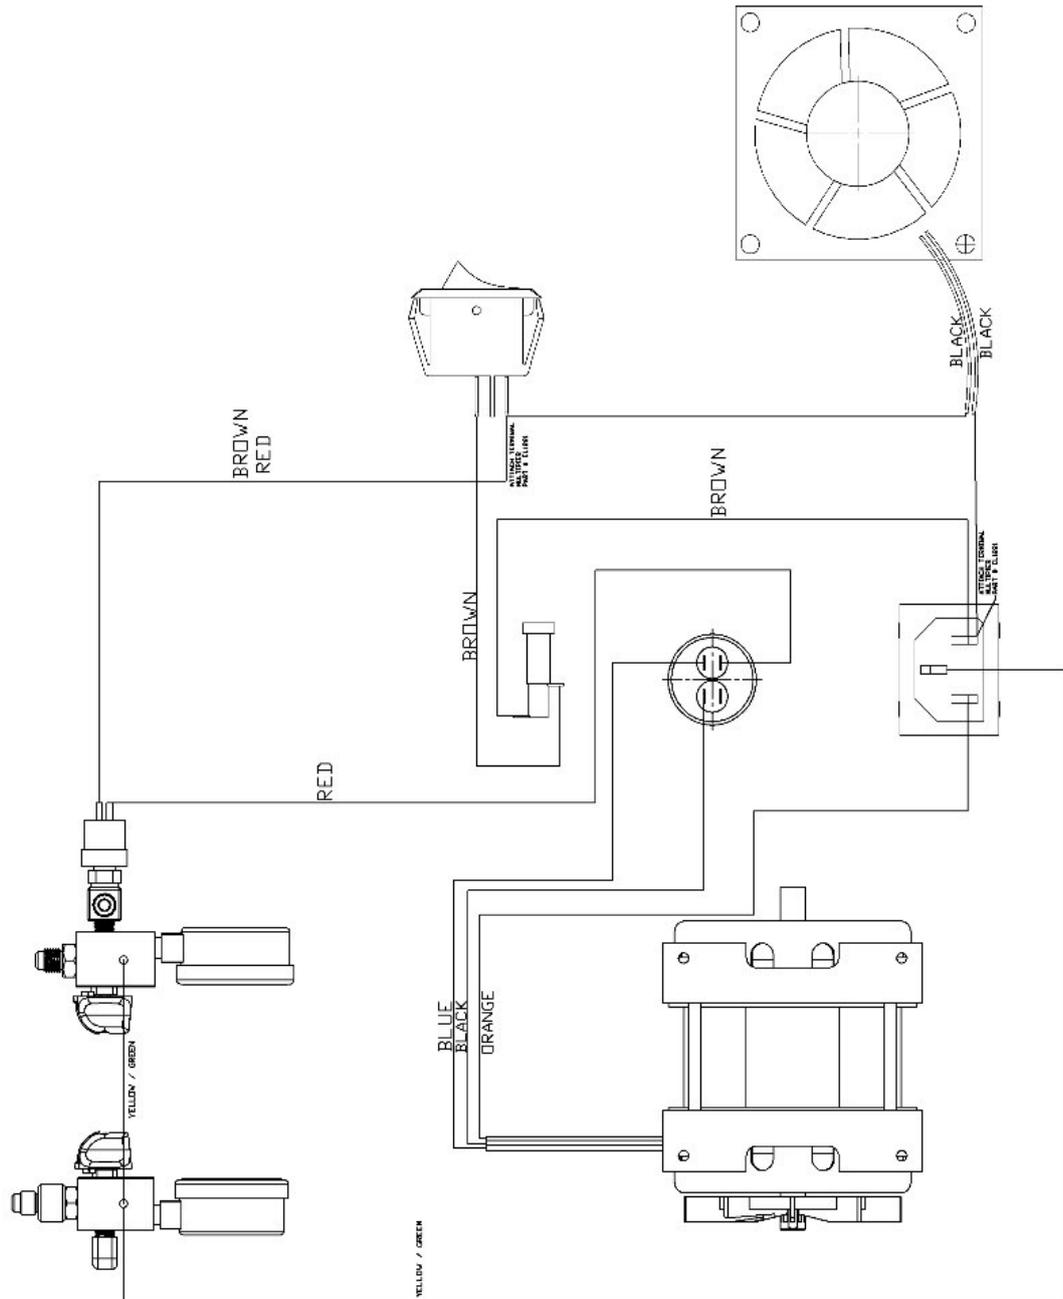

SAFETY PRESSURE SWITCH (WITH AUTO RESET FUNCTION)

The RG3000-E is equipped with an internal Automatic Safety Pressure Switch. If the pressure inside the system exceeds 38,5 bar, the system is switched off automatically. If the Safety Pressure Switch is activated automatically while filling a bottle, it could be caused by the bottle becoming overfilled.

This is a very dangerous situation! You should take steps immediately to reduce the overpressure and/or to eliminate the overfilling of the bottle.

If the Safety Pressure Switch switches the unit off...

The following precautions should be taken if the Safety Pressure Switch is activated:

a) Suspected overfilling of the recovery bottle

Connect the recovery bottle to another bottle with spare capacity so that the pressure is reduced to a safe level. This action should also reduce the pressure in the outlet line from the RG3000-E.

b) Cause of activation of Safety Pressure Switch unknown

- 1) Check that the recovery bottle is not overfilled.
- 2) Close the system valves, recovery bottle valves and RG3000-E valves.
- 3) Disconnect RG3000-E from flexible hoses.
- 4) Disconnect RG3000-E from the power supply.
- 5) Open the inlet and outlet valves very slowly.
- 6) Investigate the reason for the failure.

Once activated, the Automatic Safety Pressure Switch will reset itself if the pressure is reduced below 38 bar.

CARE AND MAINTENANCE OF YOUR RG3000-E

A filter must always be used and should be replaced frequently. Failure to use a filter will invalidate your warranty. The use of a filter will greatly reduce the risk of damage to your RG3000-E by preventing foreign material from entering the unit.

Special consideration for filtration must be given when you know the machine you are servicing has "burned out". We recommend the use of two size 162 filter driers, in line, to be used for that job and that job only. We also recommend that a clean filter be used for every service job. Each filter should be labeled and used exclusively for one type of refrigerant only.

Do not use this unit in the vicinity of spilled or open containers of gasoline or other combustible liquids

Avoid the use of extension cords. If you must use an extension cord it should be a minimum of 12 AWG and not longer than 5m. Not using an extension cord will greatly reduce the risk of fire.

Always purge the unit of any refrigerant left after completing a service job. Refrigerant left in the machine can expand and may cause damage to components.

If the unit is to be stored or not used for any length of time, we recommend that it be completely evacuated of any residual refrigerant and purged with dry nitrogen.

Whenever you perform any type of maintenance work on your RG3000-E, ensure that it is disconnected from the power supply before you begin.

TECHNICAL SPECIFICATIONS RG3000-E

| | |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type | RG3000-E |
| Application | Refrigerant recovery Liquid or Vapor |
| Suitable Refrigerants | AHRI Category III, IV & V such as:R11,R12, R13B1, R22, R123, R134A, R141B, R401A, R401B, R402A, R402B, R404A, R407A, R407B, R407C, R408A, R409A, R410A, R417A, R500, R502, R503, R507, R422A, R422D, R427A, R1234YF. <i>Not intended for use with Category I (e.g. R11, R123), II (e.g. R114) nor VI (e.g. R13, R23) refrigerants.</i> |
| Power Source | 230V/50Hz |
| Power | 250 W |
| Dimensions | 310mm x 175mm x 235mm |
| Weight | 8 kg |
| Rpm's | 1450 U/min |
| Max Working Pressure | 550 p.s.i. (38,5 bar) |
| Safety Device | Safety pressure switch with automatic reset (550 p.s.i. / 38,5 bar) |

ATTENTION

The RG3000-E should not be used with inflammable gases or with gases containing ammonia.

HELPFUL HINTS FOR REFRIGERANT RECOVERY

Refrigerant recovery has come a long way in a few short years.

On the surface it's simply the process of taking refrigerant out of a system and putting it into a tank. However, this simple process can quickly become problematic if a few items are overlooked. The following are some tips and pointers we've accumulated over the last few years that can save you time and make the process go smoother.

First you need to identify the refrigerant type and quantity in the system you are servicing.

If you determine it's a burnout, you need a special tank (a tank that's identified as containing burnout or other unidentified gases), and you need to use extra filtration prior to recovery.

If, on the other hand, you know the gas in the system is relatively clean or new, then a new tank should be used. If you're planning on putting the refrigerant back into the same system after you have finished the service or if the refrigerant is going to be reclaimed, then use a tank that has the same refrigerant in it. A word of caution about the Environmental Protection Agency (EPA): If you use a variety of refrigerant gasses in your service work - as evidenced by your refrigerant purchases - and you only own one tank, you are asking for trouble. You would be well advised to own at least one tank for every refrigerant type serviced, plus an extra for burnouts and other unknowns.

Planning Ahead

Knowing the quantity of refrigerant is important for planning storage requirements, as well as planning for the actual recovery. For instance, any system with more than 5lbs. of refrigerant is likely to have areas where the liquid can get trapped.

The key to a quick recovery procedure is to get the liquid out first, and then get the remaining vapor out. However most systems are not "recovery friendly." That is they don't have access valves at their lowest points. If some units you're servicing are on maintenance contracts, you would save significant time by installing access valves at all of the lowest points in the system, where liquid is likely to accumulate. Since most systems don't have these valves you need to be prepared to boil off the trapped liquid with a heat gun, when ever it's found. An indicator of trapped liquid in a system is frost or condensation forming on the plumbing or components where the liquid is trapped. The trapped liquid may be in an area that is not visible. In all cases trapped liquid in a system during recovery causes the recovery process to slow down, regardless of the size or type of machine

If you are unable to locate the trapped liquid (but you know it's there, because the recovery job is taking "forever"), turn on the system compressor (if it's operable) for a few seconds. This will get the refrigerant moving to another part of the system.

HOSES AND VALVES

Hoses and Schraeder valves have a large impact on recovery speed. In general, the larger the hose, the less friction on the flow of refrigerant, the quicker the recovery time. Many contractors are now using 3/8" lines for the inlet to the recovery machine, even if those lines originate out of 1/4" fittings.

Schraeder valves must be removed from the connection prior to an expedient recovery. Most wholesalers sell a tool for removing these cores, while keeping the connection sealed. The core depressor, in the end of the hose, should also be removed. These two items can turn a 20 minute job into one that goes on for hours. So, be sure to remove Schraeder valves and core depressors before every recovery job.

Another hose consideration is the little rubber grommet at the end of the hose that makes a seal with the flare fitting. We've seen these seals so worn and deformed that when the hose is connected to the flare fitting the grommet virtually seals off the the connection. This is probably never noticed in charging, because the pressure opens the grommet, but during recovery (or with suction) the deformed grommet severely restricts the flow of refrigerant.

Refrigerant Recycling

Current regulations state that used refrigerant shall not be sold, or used in a different owner's equipment, unless the refrigerant has been laboratory analyzed and found to meet the requirements of ARI 700 (latest edition). As a result, recycling and verifying ARI 700 conformance isn't economically justified in most cases. It's still a great idea to do as much cleaning of refrigerant going back into the same system (or owners system) as possible. We recommend using the largest, high-acid capacity filter that are economically feasible. Put these filters on the suction or inlet side of the recovery unit. Change filters often.

The recovery of large amounts of liquid refrigerant can sometimes carry with it large quantities of oil, if the system being serviced doesn't have an adequate oil separator installed. If this recovered refrigerant isn't going to be liquid charged back into the same system, you might want to separate the refrigerant from the oil in order to measure the oil (to know how much oil to charge back into the system). However refrigerant sent back for reclaim does not need to have the oil removed. One of the simplest and most cost effective ways to achieve this is to use a 30 or 50 lb. tank in line with your recovery machine. Connect the the system to the liquid valve of the tank then from the vapor valve of the tank connect to the inlet of your recovery machine a second tank, for storing refrigerant, should then be connected to the outlet of the recovery machine. If you encounter large amounts of liquid you will need to put a band heater around the first tank.

When the recovery job is complete the oil can be removed, from the first tank, by applying a small amount of pressure, using nitrogen, to one of the valves and expressing the oil from the other. If you are going to remove the oil from the vapor valve you will need to turn the tank upside down. Always wear safety glasses when performing this operation as the oil may be acidic and could cause severe burning.

KEEPING THE DIRT OUT

During the recovery process your recovery machine can be exposed to debris that can, potentially, damage it. Including brazing spatter and copper and brass slithers. Further contamination can be introduced from the refrigerant storage tanks. To prolong the life of your recovery machine always use an in-line filter. Whenever you are charging a system from a recovery cylinder it is a good idea to use an in-line filter to protect the system from contamination. Again, change your in-line filters often.

Getting the Liquid Out (See “Push/Pull-Method”)

Push-pull is a method of removing bulk liquid from a system using the pressure differential created by the recovery machine. Push-pull will generally not work on smaller systems because there is no bulk liquid reservoir to create a siphon from. Push-pull is mostly used on systems with a receiver tank or those with greater than 20 lbs. of refrigerant, or when transferring from one tank to another. The rate of liquid transfer is very much dependent on hose size, with larger hoses providing much better throughput.

Another trick is to chill the tank, if it's partially filled, prior or during recovery. This operation will lower the pressure in the storage tank and therefore speed up recovery. There must be a minimum of 5 lbs of liquid refrigerant in the tank you wish to chill. This operation can be performed prior to or during the recovery. See the two set up diagrams and procedures on page 8 of this manual.

There is nothing magic here, you are simply using your recovery machine to make a refrigerator where the tank is the evaporator. By throttling the outlet valve, you're effectively creating a capillary tube or an expansion device, but you need to adjust the back pressure to suit the conditions and the refrigerant. Five to ten minutes of chilling can produce some very dramatic tank cooling, depending on the conditions. If there are any non condensibles in the tank this process will not work. Also the greater the quantity of refrigerant in the tank the longer the process will take.

TROUBLESHOOTING YOUR RG3000-E

The safe way is the only way

Read and understand all safety information contained in this manual before servicing the unit.

